


Disconnect the battery and unplug the following: TURN SIGNAL INDICATOR RELAY (1) SEQUENTIAL TURN SIGNAL MOTOR (2) SEQUENTIAL TURN SIGNAL RELAY (3) EMERGENCY WARNING RELAY (4)

Wiring Schematic from "COUGAR ELECTRICAL DRAWINGS"


Colors were added to the many of the signals for easy identification.

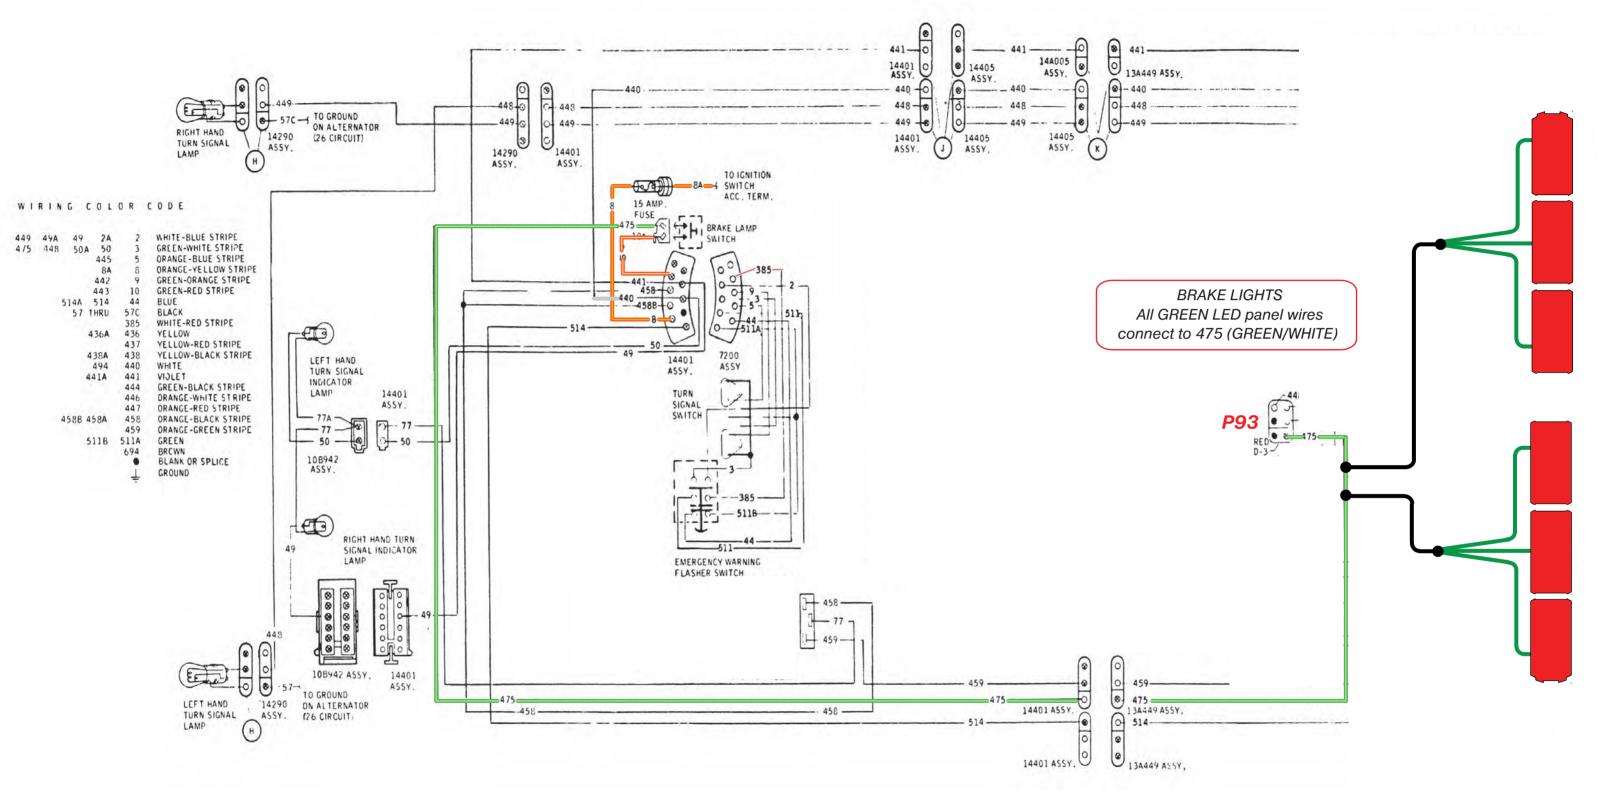

BRAKE LIGHTS

Wiring Schematic from "COUGAR ELECTRICAL DRAWINGS"


Colors were added to the many of the signals for easy identification.

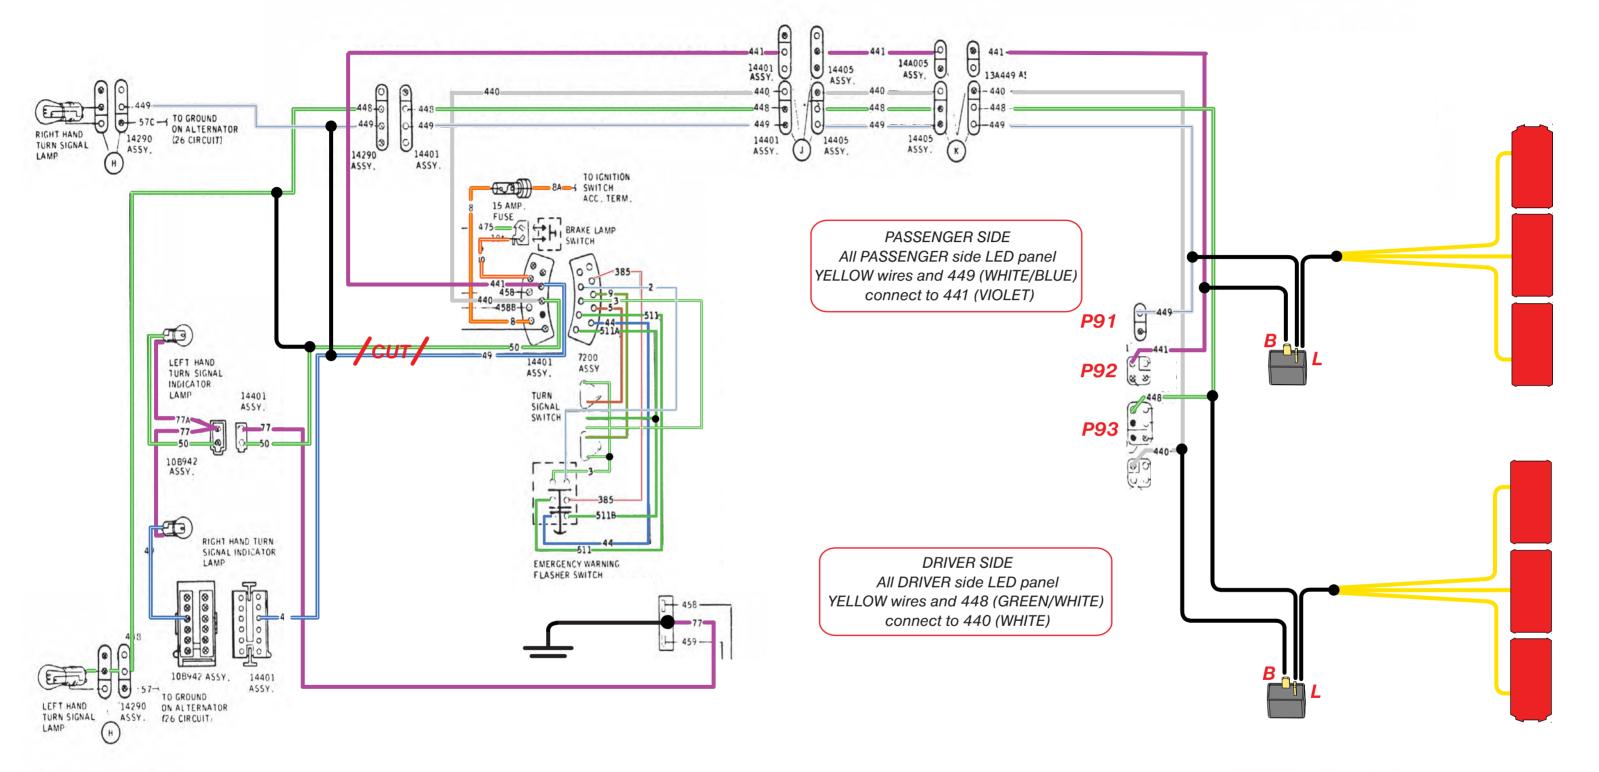

TURN SIGNALS

Wiring Schematic from "COUGAR ELECTRICAL DRAWINGS"

Colors were added to the many of the signals for easy identification.

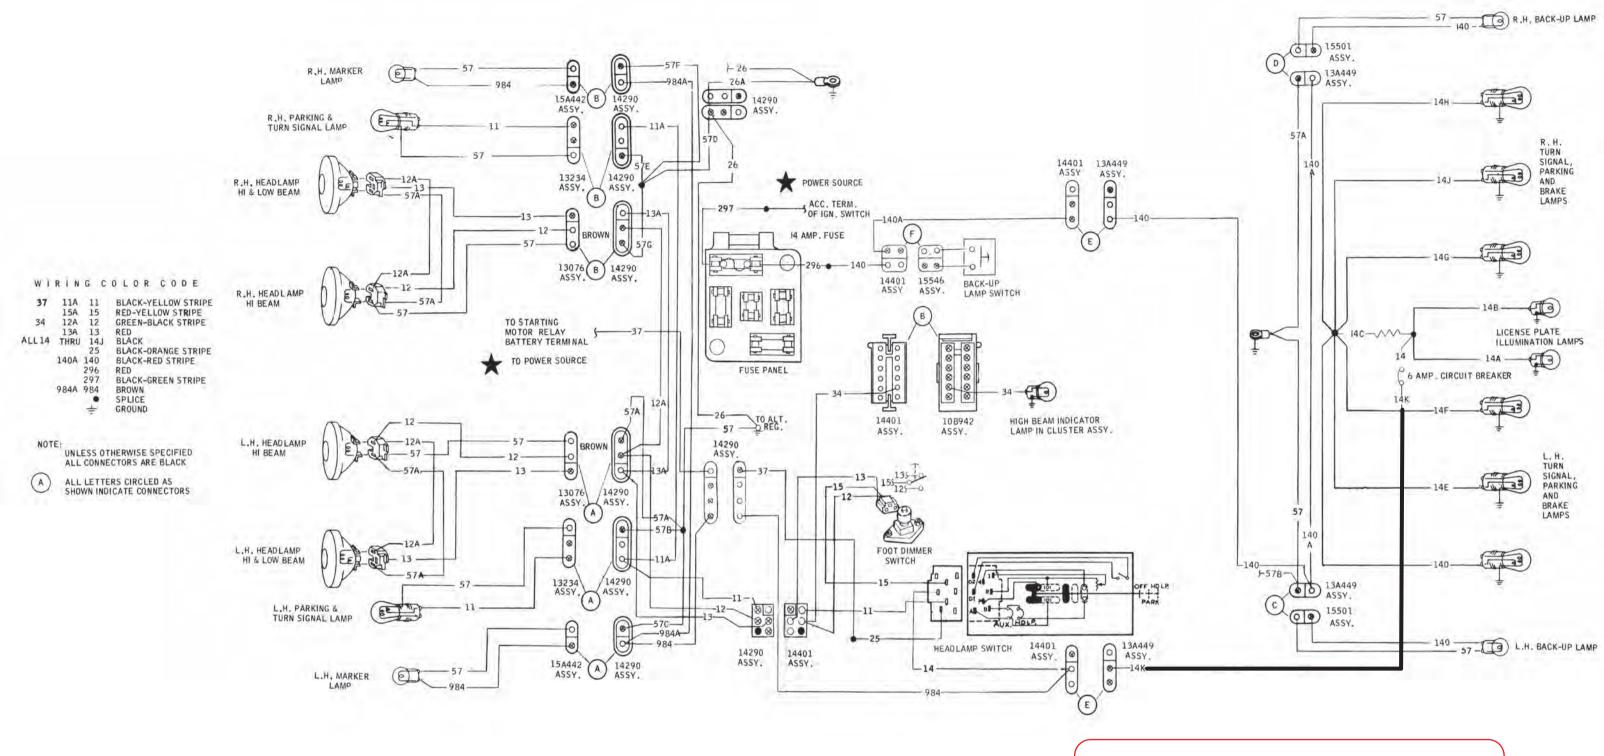

RUN/PARK LIGHTS

Wiring Schematic from "COUGAR ELECTRICAL DRAWINGS"

Colors were added to the many of the signals for easy identification.

RUN/PARK LIGHTS

Locate the PARK/RUN signal wire at the rear of the car. This is usually a BLACK wire running to the license plate lights. This wire will be used to power the RUN/PARK lights on the LED panels.

Connect this wire to ALL BROWN wires on the LED panel harness wires.