


1. Cut out the appropriate templates, position them on the inside of the housing buckets aligning the **RED** line centered with the socket hole.
2. Drill $5/32$ holes and test fit the LED panel assembly before final mounting. Use the same template for all housing buckets.

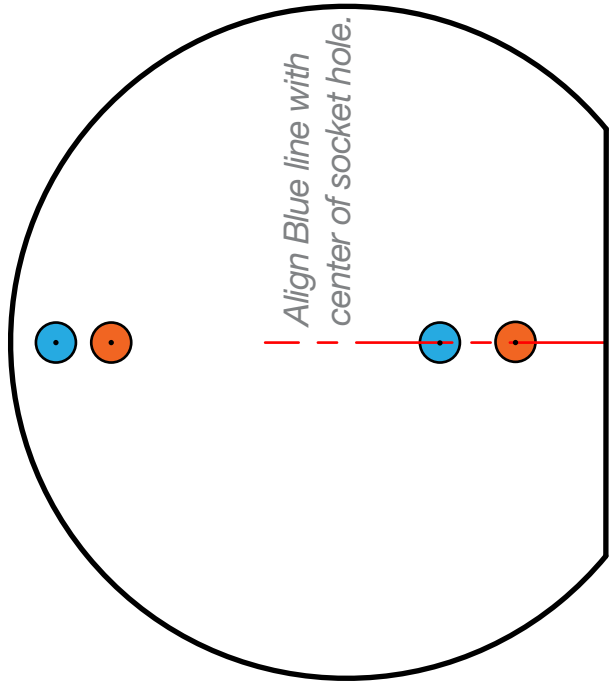

 Drill the **BLUE** markings when mounting LED panels with Reverse LED's PN 1100170R.

 Drill the **ORANGE** markings when mounting LED panels PN 1100171.